


Transmitter with ModbusRTU output for the continuous measurement of differential pressure in an IP64 case.

Can be ordered as a variant with 1 or 2 dP sensors.

Bidirectional differential pressure sensors based on dynamic (massflow) measurement with absolute pressure sensor included.

Configuring possible with standard USB-C cable.

Configuration possible without external power supply.

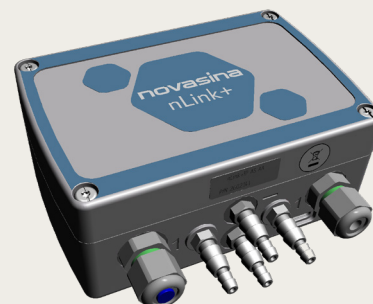

Art.-Nr.:

2602225

2602226

Product-name:

nLink+ IP MR A

nLink+ IP MR AA

1*dp sensor ± 25 Pa

2*dp sensor ± 25 Pa

Technical data

Description	nLink+ IP MR DP25
Measurement Range	-25 to +25 Pascal
Accuracy at 20°C	± 0.15 Pa
Temperature effect	Max. ± 0.10 Pa
Max. Resolution	0.1 Pa
Long term stability	$\pm 0.05\%$ FSS (typ)
Flow rate	<200ul/min
Ambient pressure dependency	Compensated with built in abs pressure sensor
Ambient pressure: Range	700 – 1260 hPa / mBar
Ambient pressure: Accuracy	± 0.5 hPa
Max. permissible overpressure	2 bar (burst pressure 4 bar)
Power supply	Rated voltage: 24 V AC / DC; Permissible voltage range: 5 to 48 V DC / 24 V AC
Power consumption	<0.5W
Display	none
Status LED	LED for power On, LED for nSens connected
Output	ModbusRTU (all climate data and diagnostic information as described in the Modbus register in the user manual)

Description	nLink+ IP MR DP25	
Housing material	PC/ABS	
Protection class	IP64	
Soldering material	lead free (RoHS compliant)	
Working temperature	0 to 50°C	
Storage temperature	-10 to 60°C (non-condensing)	
CE-/EMC	Safety:	EN 61010-1:2020
	EMC:	IEC 61000-6-2:2016, EN 61000-6-2:2019
		IEC 61000-6-3:2020, EN 61000-6-3:2007+A1:2011

Electrical installation:		
Clamping range	0.13 - 1.5mm ² (Push-in Spring clip)	
Wires	w. plastic collar ferrule DIN 46228/4:	0,25 - 0.75 mm ²
	w. wire end ferrule DIN 46228/1:	0,25 - 1.50 mm ²
	Solid, min. H05(07) V-U	0.2 - 1.50 mm ²
	Wire connection cross section AWG28 - 14	

Cable specifications depend on the installation and have to be defined by the designer or installer. Heavy machinery and other instrumentation should not share the same power supply wiring. Use noise filters and surge protectors if required.

For EMC protection it is recommended to take the following measures:

- Wires emitting interference must be separated from measurement and analysis units
- Parallel guidance of measurement cables and electrical power cables must be avoided, use different channels with separation (see European Standard EN50170 for detailed information)

Dimension & Schematics:

