


Dual channel transmitter with 2 analog signal outputs in an IP54 case.

Integrated 2.8 Zoll LCD touch display.

Configuration with USB cable for Windows PC.

Compatible with all exterior nSens sensor (such as nSens-HT-EIS, Sens-dP etc) and extension cables.

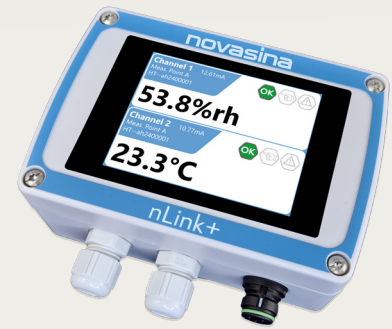

Art.-Nr.: 2602254
Product-name: nLink+ DI AS

Technical data

Description	nLink+ DI AS
Power supply	Rated voltage: 24 V AC / DC; Permissible voltage range: 5 to 48 V DC / 24 V AC
Power consumption	<0.5W
Display	2.8 Zoll LCD Touch Display
Status LED	LED for power On, LED for nSens connected
Output	2 scalable analog outputs, current 0/4..20mA or voltage 0/2..10V Accuracy <0.05% of span Linearity <0.05% of span Temperature effect 0.005% of span / °C Load (I): min. 0Ω / max. 500Ω or (Uin-2V)/Imax Load resistance (U): min. 10 kΩ / max. ∞Ω
Housing material	PC/ABS
Protection class	IP54
Soldering material	lead free (RoHS compliant)
Working temperature	0 to 50°C
Storage temperature	-10 to 60°C (non-condensing)
Compatibility	Compatible with all nSens-HT V2.14 and later or nSens-dp
CE-/EMC	Safety: EN 61010-1:2020 EMC: EC 61000-6-3:2020, EN 61000-6-3:2007+A1:2011 EN IEC 6100-6-3:2021 IEC 61000-6-2:2016, EN 61000-6-2:2019 IEC 61326-1:2012 / EN 61326-1:2013 IEC 61326-1:2020 / EN 61326-1:2021

Electrical installation:

Clamping range	0.13 - 1.5mm ² (Push-in Spring clip)	
Wires	w. plastic collar ferrule DIN 46228/4:	0,25 - 0.75 mm ²
	w. wire end ferrule DIN 46228/1:	0,25 - 1.50 mm ²
	Solid, min. H05(07) V-U	0.2 - 1.50 mm ²
	Wire connection cross section AWG28 - 14	

Cable specifications depend on the installation and have to be defined by the designer or installer. Heavy machinery and other instrumentation should not share the same power supply wiring. Use noise filters and surge protectors if required.

For EMC protection it is recommended to take the following measures:

- Wires emitting interference must be separated from measurement and analysis units
- Parallel guidance of measurement cables and electrical power cables must be avoided, use different channels with separation (see European Standard EN50170 for detailed information)

Dimension & Schematics:

