


Dual channel transmitter with 2 analog signal outputs for the continuous measurement of differential pressure in an IP54 case.

Integrated 2.8 Zoll LCD touch display.

Can be ordered as a variant with 1 or 2 dP sensors.

Bidirectional differential pressure sensors based on dynamic (massflow) measurement with absolute pressure sensor included.

Configuring possible with standard USB-C cable.

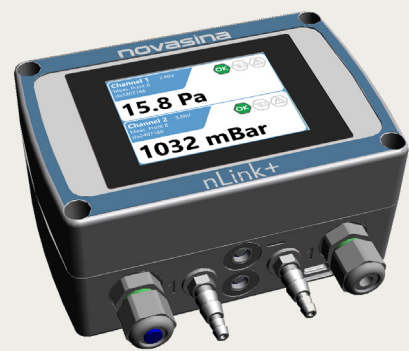

Doc-Nr.: 007799.02

Art.-Nr.:	Product-name:	
2602255	nLink+ DI AS A	1*dp sensor ±25Pa
2602256	nLink+ DI AS AA	2*dp sensor ±25Pa

Technical data

Description	nLink+ DI AS DP25	
Measurement Range	-25 to +25 Pascal	
Accuracy at 20°C	±0.15Pa	
Temperature effect	Max. ±0.10Pa	
Max. Resolution	0.1 Pa	
Long term stability	±0.05% FSS (typ)	
Flow rate	<200ul/min	
Ambient pressure dependency	Compensated with built in abs pressure sensor	
Ambient pressure: Range	700 – 1260 hPa / mBar	
Ambient pressure: Accuracy	±0.5 hPa	
Max. permissible overpressure	2 bar (burst pressure 4 bar)	
Power supply	Rated voltage: 24 V AC / DC; Permissible voltage range: 5 to 48 V DC / 24 V AC	
Power consumption	<0.5W	
Display	2.8 Zoll LCD Touch Display	
Status LED	LED for power On, LED for nSens connected	
Output	2 scalable analog outputs, current 0/4..20mA or voltage 0/2..10V	
	Accuracy <0.05% of span	
	Linearity <0.05% of span	
	Temperature effect 0.005% of span / °C	
Load (I):		min. 0Ω / max. 500Ω or (Uin-2V)/Imax
Load resistance (U):		min. 10 kΩ / max. ∞Ω

Description	nLink+ DI AS DP25	
Housing material	PC/ABS	
Protection class	IP54	
Soldering material	lead free (RoHS compliant)	
Working temperature	0 to 50°C	
Storage temperature	-10 to 60°C (non-condensing)	
CE-/EMC	Safety:	EN 61010-1:2020
	EMC:	IEC 61000-6-3:2020, EN 61000-6-3:2007+A1:2011 EN IEC 6100-6-3:2021
		IEC 61000-6-2:2016, EN 61000-6-2:2019
		IEC 61326-1:2012 / EN 61326-1:2013
		IEC 61326-1:2020 / EN 61326-1:2021

Electrical installation:		
Clamping range	0.13 - 1.5mm² (Push-in Spring clip)	
Wires	w. plastic collar ferrule DIN 46228/4:	0,25 - 0.75 mm²
	w. wire end ferrule DIN 46228/1:	0,25 - 1.50 mm²
	Solid, min. H05(07) V-U	0.2 - 1.50 mm²
	Wire connection cross section AWG28 - 14	

Cable specifications depend on the installation and have to be defined by the designer or installer. Heavy machinery and other instrumentation should not share the same power supply wiring. Use noise filters and surge protectors if required.

- For EMC protection it is recommended to take the following measures:
- Wires emitting interference must be separated from measurement and analysis units
 - Parallel guidance of measurement cables and electrical power cables must be avoided, use different channels with separation (see European Standard EN50170 for detailed information)

Dimension & Schematics:

