


ModbusRTU transmitter in an IP54 case.

Integrated 2.8 Zoll LCD touch display.

Configuration with USB cable for Windows PC.

Configuration possible without external power supply.

Compatible with all exterior nSens sensor (such as nSens-HT-EIS, Sens-dP etc) and extension cables.

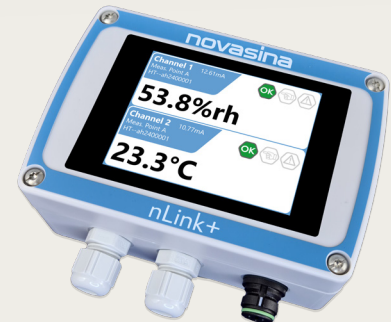

Art.-Nr.: 2602291
Product-name: nLink+ DI MR

Technical data

Description	nLink+ DI MR
Power supply	Rated voltage: 24 V AC / DC; Permissible voltage range: 5 to 48 V DC / 24 V AC
Power consumption	<0.5W
Display	2.8 Zoll LCD Touch Display
Status LED	LED for power On, LED for nSens connected
Output	ModbusRTU (All climate values and diagnostic information as described in the Modbus register in the user manual)
Housing material	PC/ABS
Protection class	IP54
Soldering material	lead free (RoHS compliant)
Working temperature	0 to 50°C
Storage temperature	-10 to 60°C (non-condensing)
Compatibility	Compatible with all nSens-HT V2.14 and later or nSens-dp
	Safety: EN 61010-1:2020
	EMC: EC 61000-6-3:2020, EN 61000-6-3:2007+A1:2011 EN IEC 6100-6-3:2021
CE-/EMC	IEC 61000-6-2:2016, EN 61000-6-2:2019 IEC 61326-1:2012 / EN 61326-1:2013 IEC 61326-1:2020 / EN 61326-1:2021

Electrical installation:

Clamping range	0.13 - 1.5mm ² (Push-in Spring clip)	
Wires	w. plastic collar ferrule DIN 46228/4:	0,25 - 0.75 mm ²
	w. wire end ferrule DIN 46228/1:	0,25 - 1.50 mm ²
	Solid, min. H05(07) V-U	0.2 - 1.50 mm ²
	Wire connection cross section AWG28 - 14	

Cable specifications depend on the installation and have to be defined by the designer or installer. Heavy machinery and other instrumentation should not share the same power supply wiring. Use noise filters and surge protectors if required.

For EMC protection it is recommended to take the following measures:

- Wires emitting interference must be separated from measurement and analysis units
- Parallel guidance of measurement cables and electrical power cables must be avoided, use different channels with separation (see European Standard EN50170 for detailed information)

Dimension & Schematics:

