



Dual channel transmitter with 2 analog signal outputs for the continuous measurement of differential pressure for installation in electrical cabinets on mounting rails.

Can be ordered as a variant with 1 or 2 dP sensors.

Bidirectional differential pressure sensors based on static (membrane) measurement with absolute pressure sensor included.

Configuration with USB cable for Windows PC.

Configuration possible without external power supply.

Art.-Nr.:

2602205
2602206

Product-name:

nLink+ EC AS C 1*dp sensor $\pm 5000\text{Pa}$
nLink+ EC AS CC 2*dp sensor $\pm 5000\text{Pa}$

Technical data:

Measurement Range	-5000 to +5000 Pascal
Accuracy at 20°C	Typical $\pm 1.0\%$ F.S.
Temperature effect	Max. $\pm 0.20\text{Pa}$
Max. Resolution	0.1 Pa
Long term stability	$\pm 0.10\%$ FSS (typ)
Ambient pressure dependency	Compensated with built in abs pressure sensor
Ambient pressure: Range	700 – 1260 hPa / mBar
Ambient pressure: Accuracy	± 0.5 hPa
Max. permissible overpressure	0.1 bar (burst pressure 0.3 bar)
Power supply	24V DC, Permissible voltage range: 5 to 39V
Power consumption	<0.5W
Display	none
Status LED	LED for power On, LED for nSens connected
Output	2 scalable analog outputs, current 0/4..20mA or voltage 0/2..10V Accuracy <0.05% of span Linearity <0.05% of span Temperature effect 0.005% of span / °C Load (I): min. 0Ω / max. 500Ω or (Uin-2V)/Imax Load resistance (U): min. 10 kΩ / max. $\infty\Omega$
Housing material	PA6.6 (UL94V0), mounting rail holder
Protection class	none, installation in protected cabinet required
Soldering material	lead free (RoHS compliant)
Working temperature	0 to 50°C
Storage temperature	-10 to 60°C (non-condensing)
CE-/EMC	Safety: EN 61010-1:2020 EMC: IEC 61000-6-2:2016, EN 61000-6-2:2019 IEC 61000-6-3:2020, EN 61000-6-3:2007+A1:2011

Electrical installation:


Clamping range	0.13 - 1.5mm ² (Push-in Spring clip)	
Wires	w. plastic collar ferrule DIN 46228/4:	0,25 - 0.75 mm ²
	w. wire end ferrule DIN 46228/1:	0,25 - 1.50 mm ²
	Solid, min. H05(07) V-U	0.2 - 1.50 mm ²
	Wire connection cross section AWG28 - 14	

Cable specifications depend on the installation and have to be defined by the designer or installer. Heavy machinery and other instrumentation should not share the same power supply wiring. Use noise filters and surge protectors if required.

For EMC protection it is recommended to take the following measures:

- Wires emitting interference must be separated from measurement and analysis units
- Parallel guidance of measurement cables and electrical power cables must be avoided, use different channels with separation (see European Standard EN50170 for detailed information)

Dimension & Schematics:

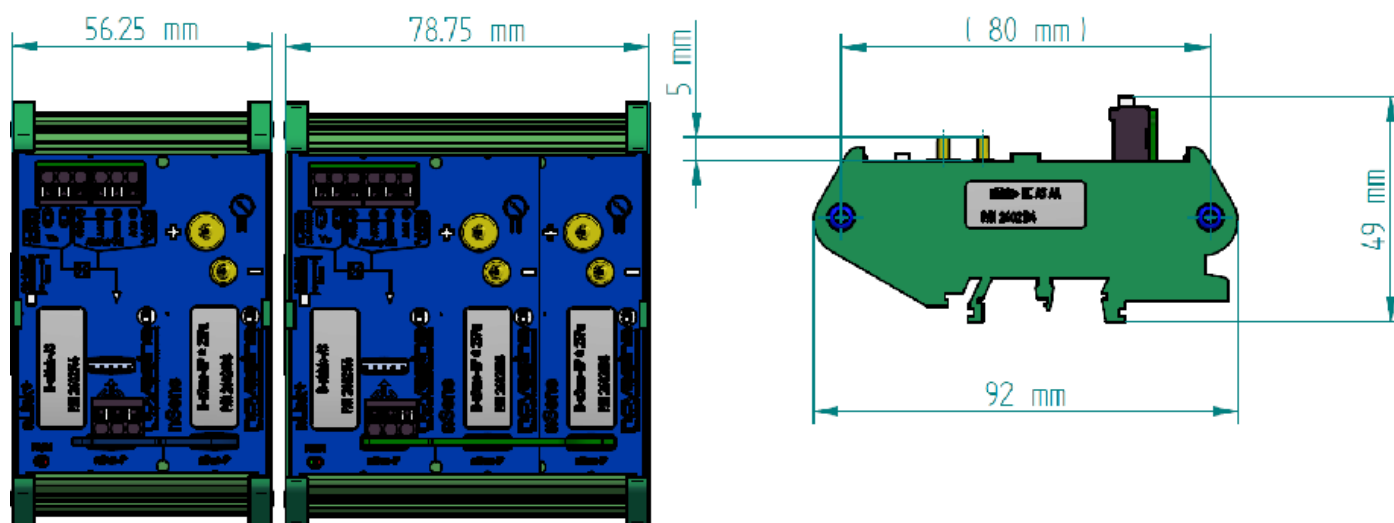

More information & accessoires

[Link to Website>](#)



Technical data subject to change without prior notice

Novasina AG – Neuheimstrasse 12 – CH-8853 Lachen
Phone: +41 55 642 67 67 – sales@novasina.ch – www.novasina.com